

ANTIBAC MARIO

- antimicrobical general light
- 1. Content of the package
- 2. Product specifications
- 3 Installation
 - Attachment of the luminaire
 - Electrical connections





Read the installation instructions before installation.



Do not look directly at the light source.



Conforms to EC Directives.



Luminaire must not be covered with thermal insulation.




There are no serviceable parts inside the luminaire. Broken luminaire should be replaced with a new one.



Recyclable

1. Content of the package

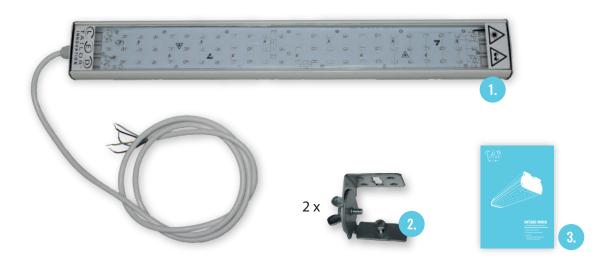

- 1. ANTiBAC MARiO luminaire
- 2. Tiltable brackets (2 pc.)
- 3. Installation instructions

2. Product specifications

ANTIBAC MARIO

Control method	DALI			
Operating voltage	230 VAC, 50-60 Hz			
Operating temperature	-2040°c			
Cord	2 m (5x1.0 MSK)			
Frame material	aluminium			
Method of attachment	tiltable bracket			
Weight	650: 2,8 kg 1200: 6 kg			
Warranty	3 years			

Product number	Length (mm)	Power (W)	Protection class	Beam angle
LTI0045	1200	100	IP44	60°
LTI0052	1200	100	IP44	120°
LTI0656	1200	100	IP65	60°
LTI0663	1200	100	IP65	120°
LTI0069	650	45	IP44	60°
LTI0076	650	45	IP44	120°
LTI0670	650	45	IP65	60°
LTI0687	650	45	IP65	120°



Attachment of the luminaire:



Place the brackets to the rail and adjust desired destination from each other.



Place the luminaire on the surface where it will be attached and mark the attachment spots with a pencil.



Attach the luminaire and adjust the brackets to desired angle.



Tighten the hinges of the tiltable brackets.

Electrical connections:

NOTE! The luminaire may only be connected by an authorized electrician. Before starting the connection, make sure that the wires are free of voltage.



NOTE! Never short-circuit the DALI-conductors. Make sure the DALI-conductors are isolated from each other when DALI is not used.





