


# WiSDOM AiR MOBILE

- mobile disinfection luminaire


---

1. Content of the package
2. Product specifications
3. Installation and operation
  - Installing the luminaire
  - Positioning the luminaire

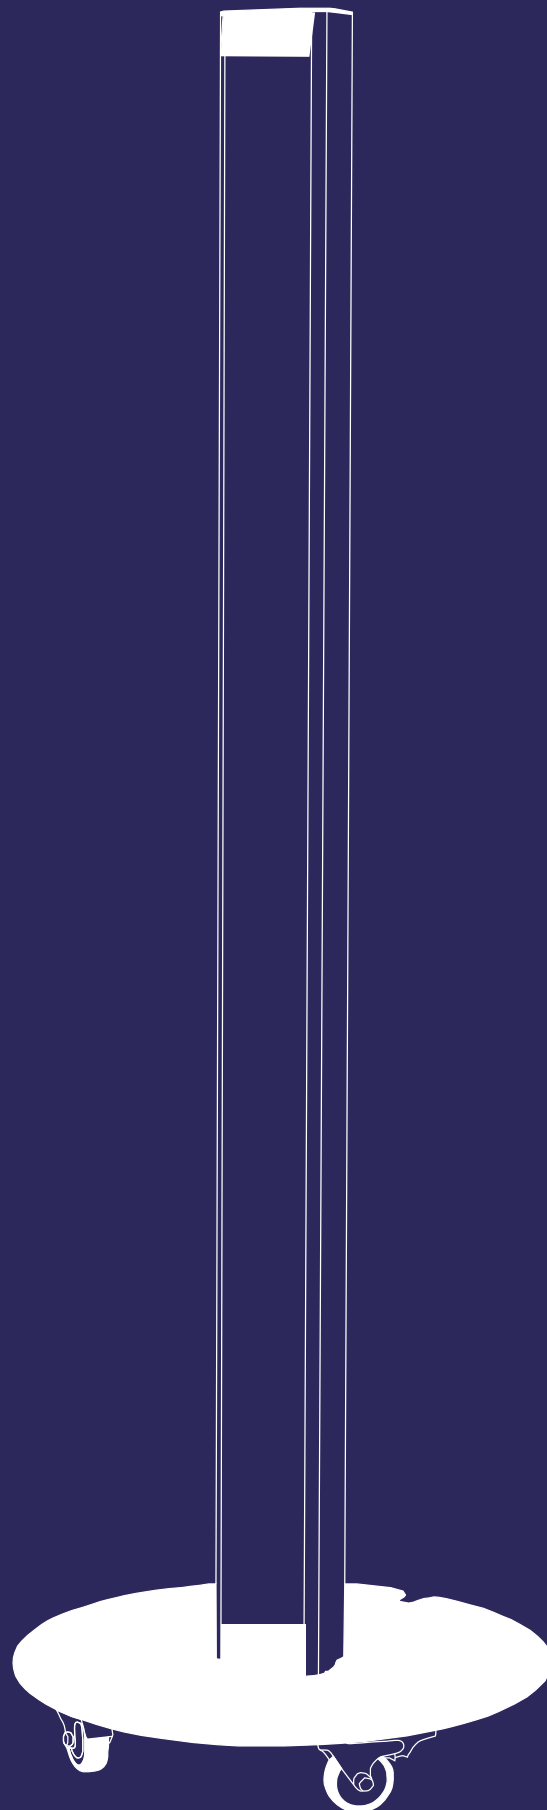




Read the installation instructions before installation.

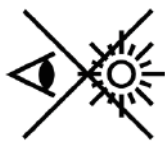

Do not look directly at the light source.



Conforms to EC Directives.

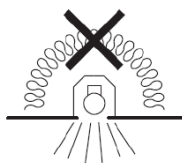

Luminaire must not be covered with thermal insulation.




There are no serviceable parts inside the luminaire. Broken luminaire should be replaced with a new one.



Recyclable


## 1. Content of the package

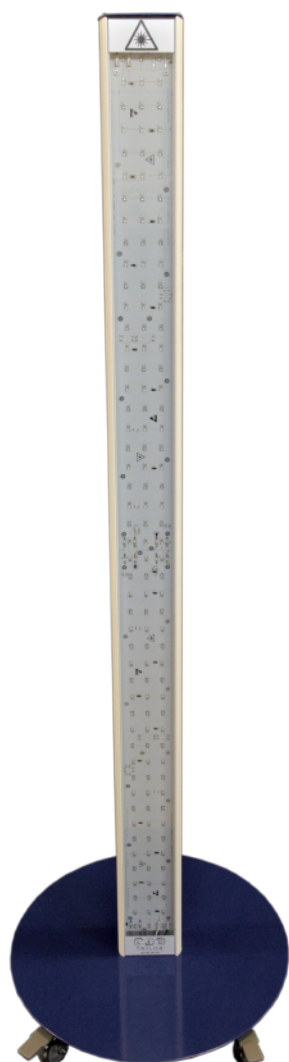

1.



2.

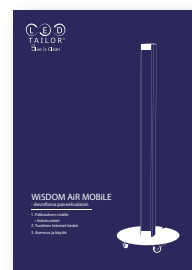

3.

1. WISDOM AiR MOBILE luminaire
2. Timer switch
3. Installation instructions

## 2. Product specifications

### WiSDOM AiR MOBiLE

Operating voltage	200-250 VAC, 50-60 Hz
Protection class	IP44
Operating temperature	-20...40°C
Cord	5 m with plug
Control	ON/OFF
Material	frame: aluminium light shielding: glass / PC
Method of attachment	wheeled stand
Weight	7 kg
Warranty	3 years

Product number	Power
LT10458	100 W
LT10465	200 W

## 3. Installation and operation

### Installing the luminaire:

WiSDOM AiR MOBiLE comes ready to use right from the package. No electrician is needed for installation. Start using the luminaire by plugging it in an electrical outlet.


You can switch the luminaire on and off manually using the switch on top of the device or automatically by using the timer supplied with the package (for use at night, for example). Please follow the timer's operating instructions.

During transport or storage, the power cord can be wound around the handles on the back of the luminaire.


### How to position the luminaire:

- The disinfection power of the luminaire is affected by the distance between the device and the surface to be disinfected. The closer to the surface the luminaire is, the faster the disinfection.
- The light beam covered by the luminaire expands the farther away the luminaire is from the surface, but this also lengthens the time needed for disinfection.
- Position the luminaire so that the light beam covers the surface with as little obstruction as possible.
- For best disinfection results, use multiple luminaires placed at different angles or repeat the treatment by repositioning and redirecting the luminaire.

## WiSDOM AiR MOBiLE 100W

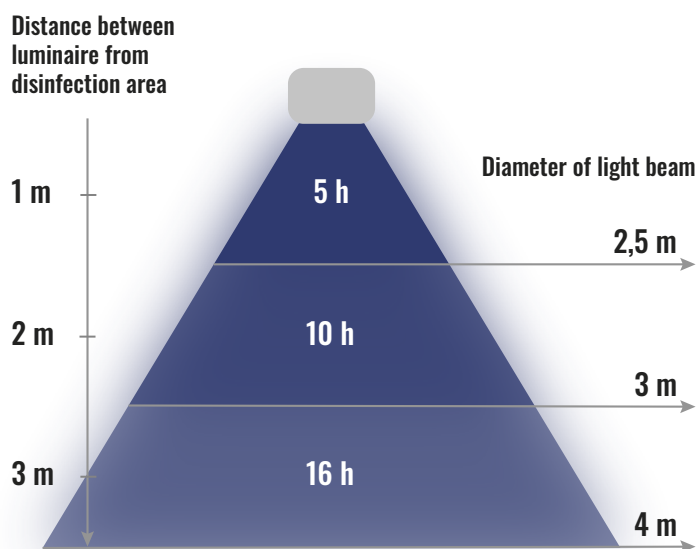

## WiSDOM AiR MOBiLE 200W

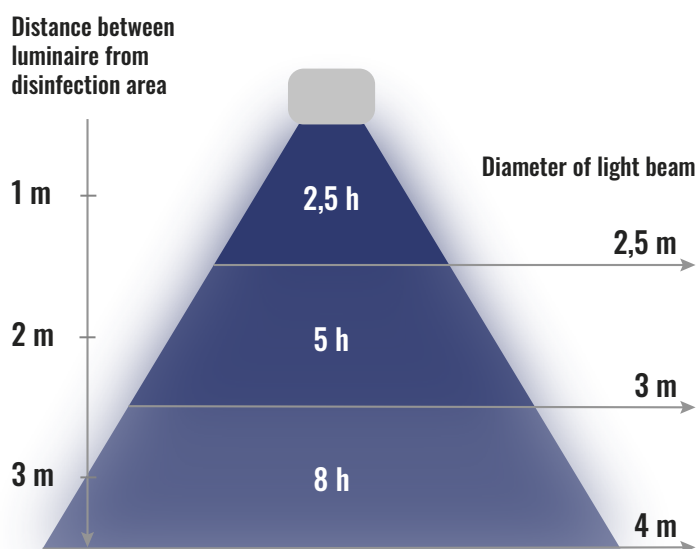

### NOTE!

The time needed for disinfection can be halved if the surfaces are treated with LED Tailor's catalytic coating. The coating boosts the disinfecting power of the light, destroying microbes from the coated surface faster as compared to an untreated surface. The photocatalytic reaction also destroys viruses, spores and VOCs.